

SUMMARY OPERATION GUIDE – K3000 SERIES

Full details are to be found in the User Manual.

NORMAL QUIESCENT CONDITION

The green power-on lamp will be lit, and no other indicators. Normally the control-enable key should be left in the disabled position to prevent unauthorised or accidental operation. The internal buzzer will sound intermittently as a reminder if it has been left enabled.

FAULT CONDITION

The fault buzzer will sound, accompanied by the appropriate yellow fault lamps. The buzzer may be silenced by turning the key to **Enable** and pressing the **Silence** button, although it will continue to sound intermittently as a reminder until the fault has been cleared. Should the System Fault lamp light by itself, open the door of the panel and look for additional yellow fault lights on the circuit-boards inside which will indicate sounder faults, etc. Contact your maintenance company for assistance - please note and provide details of the fault information provided at the panel. When the fault has been cleared, the panel will automatically return to the Normal condition.

FIRE CONDITION

The sounders will activate, the internal buzzer will sound and a red Zone lamp will flash, indicating the area causing the alarm. If no Zone lamp is lit, the alarm has probably been caused by the remote "Class-Change" input which is occasionally used when interlinking multiple panels. Investigate the cause of activation and take action as appropriate.

SILENCING THE SOUNDERS

Turn the control key to **Enable** and press **Silence**. The sounders will stop, the red Zone lamp will stop flashing (lighting constantly instead) and the internal buzzer will switch to an intermittent beep every few seconds. Providing the cause of the alarm has been located, responded to and cleared (for example: a callpoint's glass has been replaced), the system can be reset by pressing the **Reset** button. The sounders can be reactivated by turning the control key to **Evacuate** at any time if required.

RESETTING THE SYSTEM

Ensure the control key has been turned to **Enable**. If the sounders are operating, press the **Silence** then the **Reset** button. If they have previously been silenced, simply press the **Reset** button.

The panel indicators will all light together while the Reset button is pressed then extinguish after it has been released, returning to the normal quiescent condition. However if the cause of the activation is still present it will return to a Fire state and the sounders will re-start. Ensure the cause of activation has been cleared before resetting.

USER RESPONSIBILITIES

All events- Fire, Fault, tests and maintenance visits should be noted in the log book.

Test the system weekly by activating a call point with a test key. Test a different one in turn each week.

Notify your maintenance company of any faults, logging the time and date informed.